



3510-1 Port Jacksonville Pkwy, Jacksonville, FL 32226  
800-213-7981

**Instructions for Installation and Care of Arctic Cat / Textron Prowler Pro**  
**Soft Door Rear Window Combo**  
AC-PRO-DRW01

**Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.**

Be sure to read these instructions thoroughly before opening and installing the enclosure. The installation is best done when the temperature is 70 degrees F. or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather it helps to store the adhesive Velcro at room temperature prior to installation.

1. Check over the parts included in the carton with the parts list shown below:

**Soft Doors:**

1" Adhesive Velcro Strip	2 each	16" long
2" Adhesive Velcro Strip	2 each	5" long
“ “	2 each	8" long
“ “	2 each	20" long
	4 each	32" long
	4 each	34" long
Snap studs	11 each ( 1 extra )	
Door Panels	2 each	

**Rear Window:**

2" Adhesive Velcro Strip		
“ “	2 each	53" long

**If any parts are damaged or missing please contact customer service at (800) 213-7981.**

2. Begin by cleaning the roll cage and plastic that surrounds the doors. Using rubbing alcohol is preferable. This step is very important for the Velcro strips to properly adhere.
3. Start with installing the Rear Window. The two 53" adhesive Velcro strips will go on the frame above and below the rear window. The Velcro will go on as shown in the photos on the next page. Make sure to center the strips.



4. Next install the 20" adhesive strips down each side of the Rear Window as shown in the photo below.



5. Now attach the Rear window to the frame making sure to center it correctly. When installing the doors the rear part of the door will attach to the sides of the Rear Window.

6. Now start installation by placing the 2" adhesive Velcro strips around the outside edges of the upper door frame. Starting at the front of the frame first place the 34" strip as shown in the photo below.



7. Next place the 32" strip across the top of the frame as shown below.



8. Next place the 5" strip in the rear corner as shown below.



9. After all the Velcro is in place take the door and place it on the vehicle. The following series of photos show how it should look after being installed.






10. Next attach the 8" adhesive Velcro strip to the bottom of the front top portion of the door as shown in the photos below.



11. Now take the 18" Strip that is 1" wide and place it on the inside front portion of the factory door. Then take the bottom front section of the soft door and wrap it around the factory door and attach the two together as shown in the photos below.

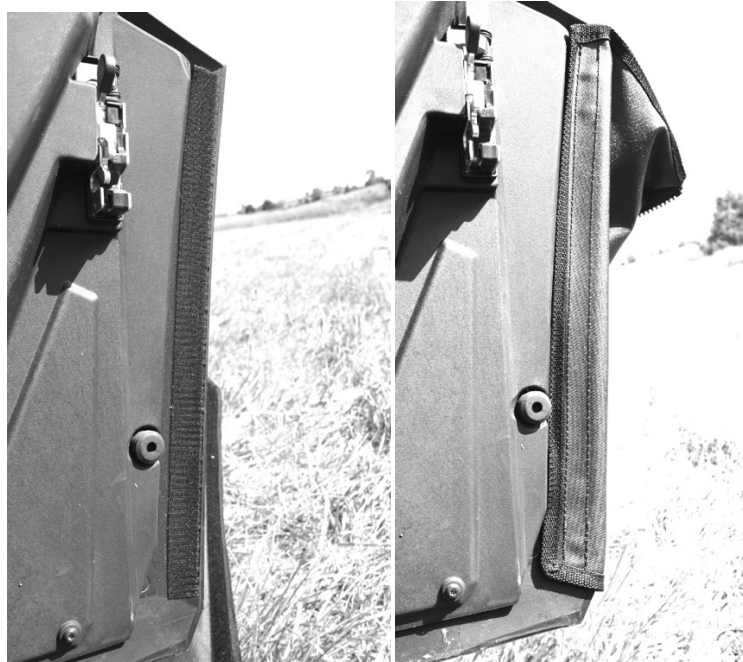

12. Lastly install the snap studs into the plastic for the bottom rear portion of the door. It works best to put the screw studs into the snap sockets on the door first. Then one by one pull the door in place and push the screw into the plastic making sure to put enough pressure to leave a mark. Then remove the screw stud from the door and install it where the mark was left behind at. The following picture show what it looks like.



### **Cleaning and Storage Recommendations:**

1. Before removing the Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.

2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.
3. A special cleaner conditioner is available from Falcon Ridge that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.

**Thank you for your purchase!**



## Return Policy

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly **as it was originally packaged from the factory to get a full refund for the product!**

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

**All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 25% restocking fee will apply.**

If ordered from Falcon Ridge please call at 800-213-7981 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Falcon Ridge without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Falcon Ridge's many distributors, you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. **NOTE: All windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement of a windshield will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a refund.**) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

## Warranty

To The Owner of this Product:

Thank you for purchasing one of our Falcon Ridge Cab Enclosures, Tops &/or Windshields! Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.