



**Instructions for Installation and Care of**  
**Arctic Cat / Textron Wildcat XX**  
**Soft Door Rear Window Combo**

3510-1 Port Jacksonville Pkwy, Jacksonville, FL 32226  
800-213-7981

AC-WILDCAT-XX-DRW01

**Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.**

1. Be sure to read these instructions thoroughly before opening and installing the Wildcat XX Soft Door Rear Window Combo. The installation is best done when the temperature is 70 degrees F. or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather it helps to store the adhesive Velcro at room temperature prior to installation.
2. Carefully open the carton and remove the enclosure on a large flat surface that is clean and free of dirt.
3. Check over the parts included in the carton with the parts list shown below:

**Adhesive Velcro Hook Strips:**

“ “ “ “  
“ “ “ “  
“ “ “ “

Steel Flat Bar 1 1/2” wide

**Soft Doors**


22 each-----3"  
4 each-----13"  
2 each-----27"  
2 each-----15"

**Soft Rear Window**

“ “ “ “ 8 each-----3"  
“ “ “ “ 2 each-----6"  
“ “ “ “ 2 each-----17"  
“ “ “ “ 1 each-----18"

# Soft Doors

1. Begin by holding the door up to the frame and attach it using the double-sided Velcro strips sewn perpendicular to the edge of the door. At each of the double-sided strips take one of the 3" adhesive Velcro strips and adhere it to the inside of the frame. Then wrap the double-sided strip around it so that the adhesive strip holds it firmly in place. the following diagrams shows how it should look.

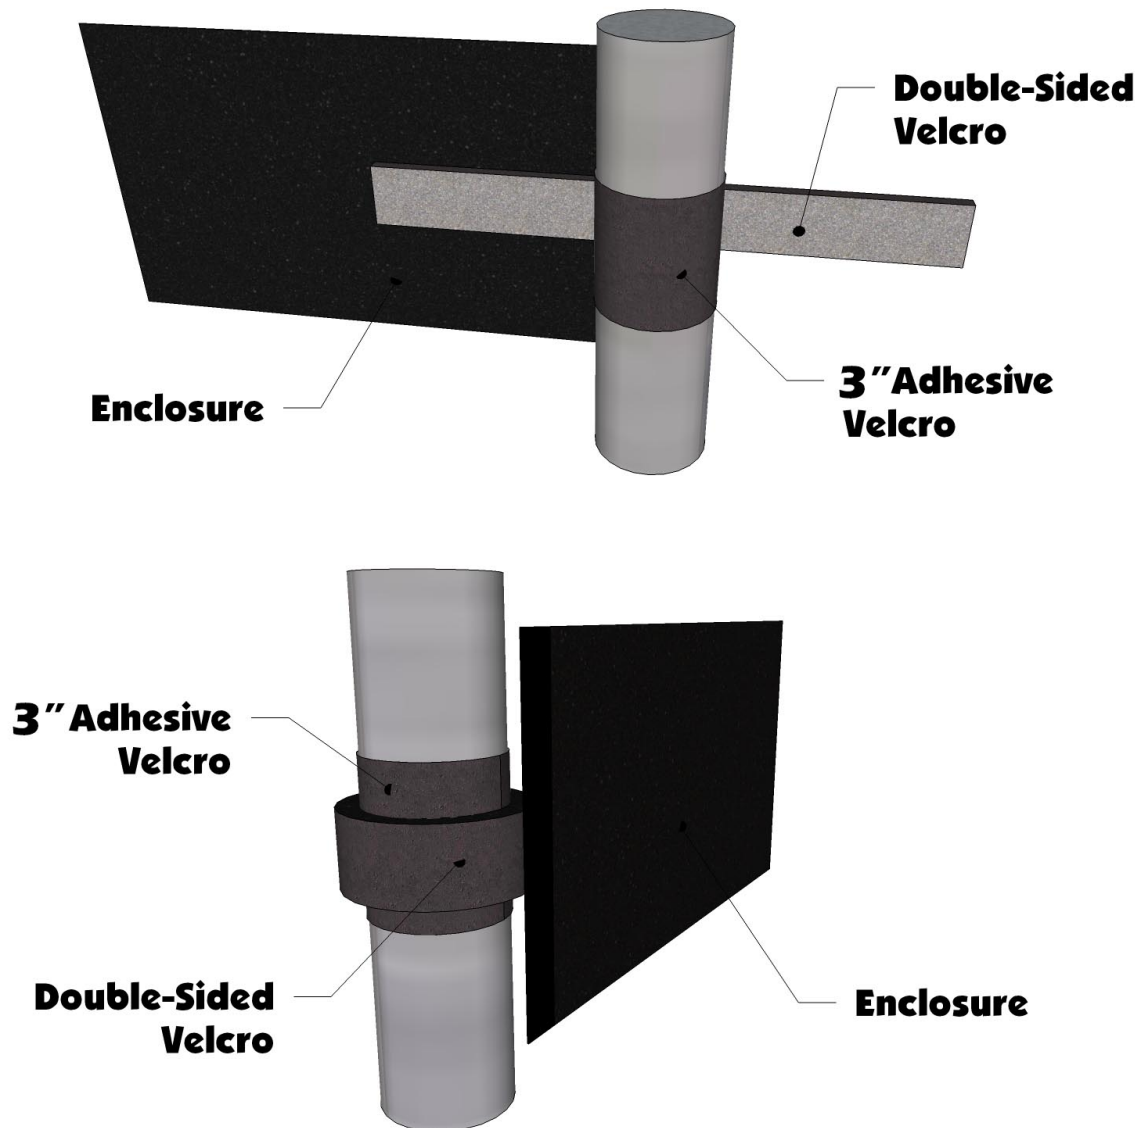


2. Once all the double-sided Velcro strips are attached all that is left is to attach the adhesive Velcro that matches up with the Velcro sewn along the bottom of the door. The rear part of the door will use the 13" adhesive strips that will go on the vehicle as shown in the picture below.




3. The bottom of the front part of the door attaches to the inside of the factory doors. Take the 27" and 13" adhesive strips and place them along the top of the doors as shown in the pictures below. NOTE: You may need to cut the strips down to make them fit correctly.



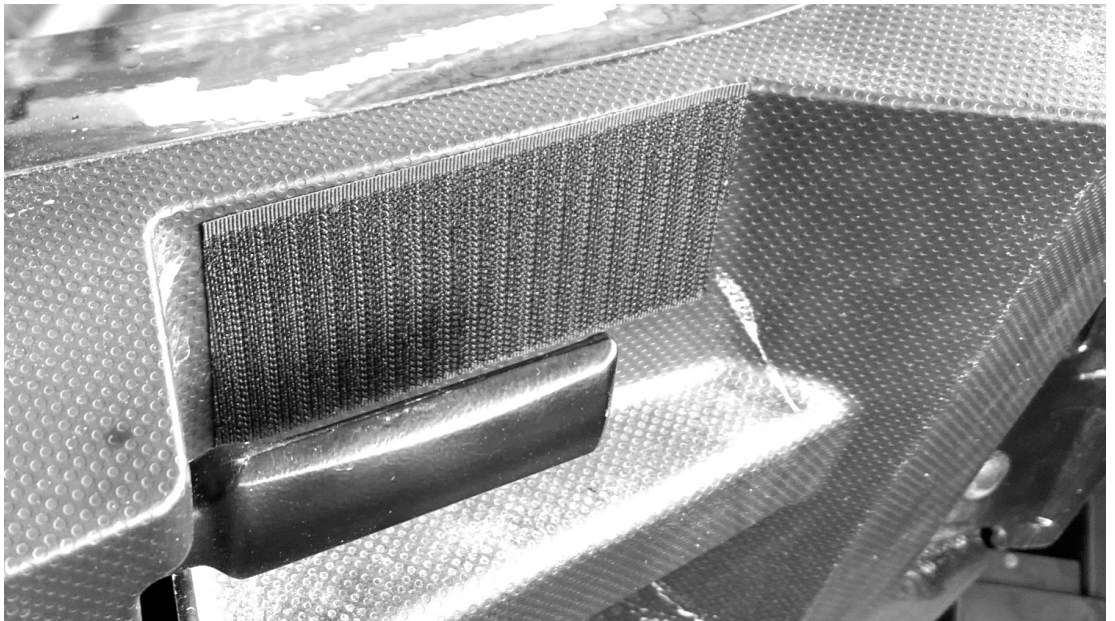



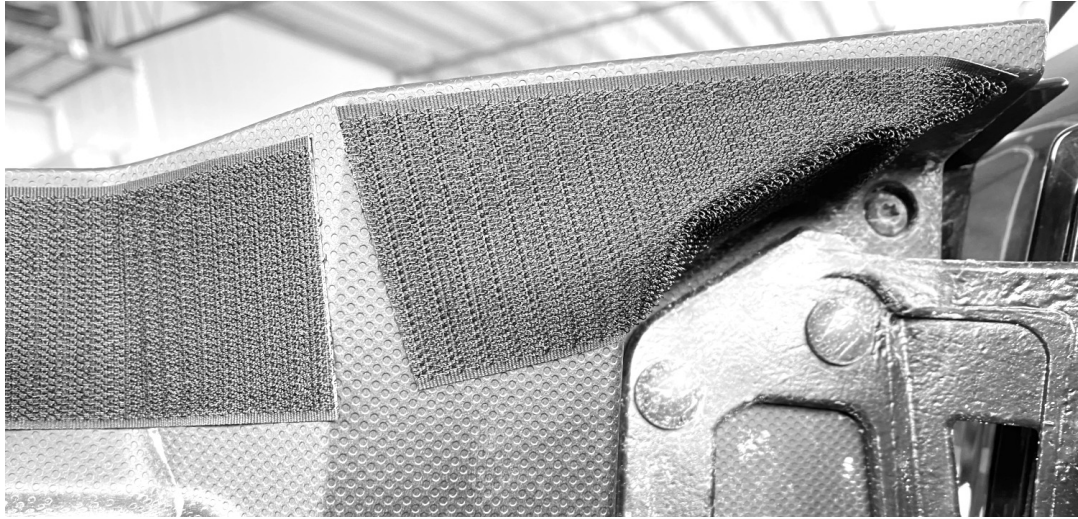

4. That completes the installation. When opening and closing the door there is a series of magnets sewn along the back edge of the door that will attach to a metal bar that slides into a pocket on the back section of the door. The pictures below show how this works.





## **Rear Window**

1. Begin by placing the two 17" adhesive strips on the top bar facing upwards on either side of the center bar. Then hang the Rear Window on the inside as shown in the picture below.



2. Next attach the double-sided strips down each side as you did on the doors. See photo below.



3. Finally attach the two 6" and the one 18" adhesive strips across the bottom of the Rear window behind the seats. See pictures below



### Cleaning and Storage Recommendations:

1. Before removing the Falcon Ridge Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.
3. A special cleaner conditioner is available from Falcon Ridge that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.