



3510-1 Port Jacksonville Pkwy, Jacksonville, FL 32226  
800-213-7981

**Instructions for Installation and Care of Honda Pioneer 700-4**  
**Soft Doors Rear Window Combo**  
HO-7004-DRW01

**CAUTION: Do not smoke inside the cab or expose the enclosure to direct flames. Product is FLAMMABLE.**


Be sure to read these instructions thoroughly before opening and installing. The installation is best done when the temperature is 70 degrees F. or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather it helps to store the adhesive Velcro at room temperature prior to installation.

1. Carefully open the carton and roll out the enclosure on a large flat surface that is clean and free of dirt or other material that may soil the textile or scratch the clear vinyl windows of the enclosure.
2. Check over the parts included in the carton with the parts list shown below:


Velcro hook strips	34 each	3" long
Velcro hook strips	2 each	4" long
Velcro hook strips	2 each	5" long
Velcro hook strips	2 each	9" long
Velcro hook strips	1 each	19" long
Velcro hook strips	2 each	39" long
Velcro hook strips	2 each	42" long
Screw snaps	5 each (1 extra)	
Cab enclosure	6 Pieces	

**If any parts are damaged or missing please contact customer service at (800) 213-7981.**


3. Begin by opening up the enclosure and with the help of another person drape the enclosure over the roll cage and arrange into the correct position.
4. You will notice double-sided Velcro strips sewn to the cab enclosure. At these locations, wrap the roll bar with one of the 3" adhesive Velcro strips. After wrapping the Velcro around the bar wrap the double-sided strip around the adhesive Velcro providing a very secure hold. Pictures on next page show how this works.

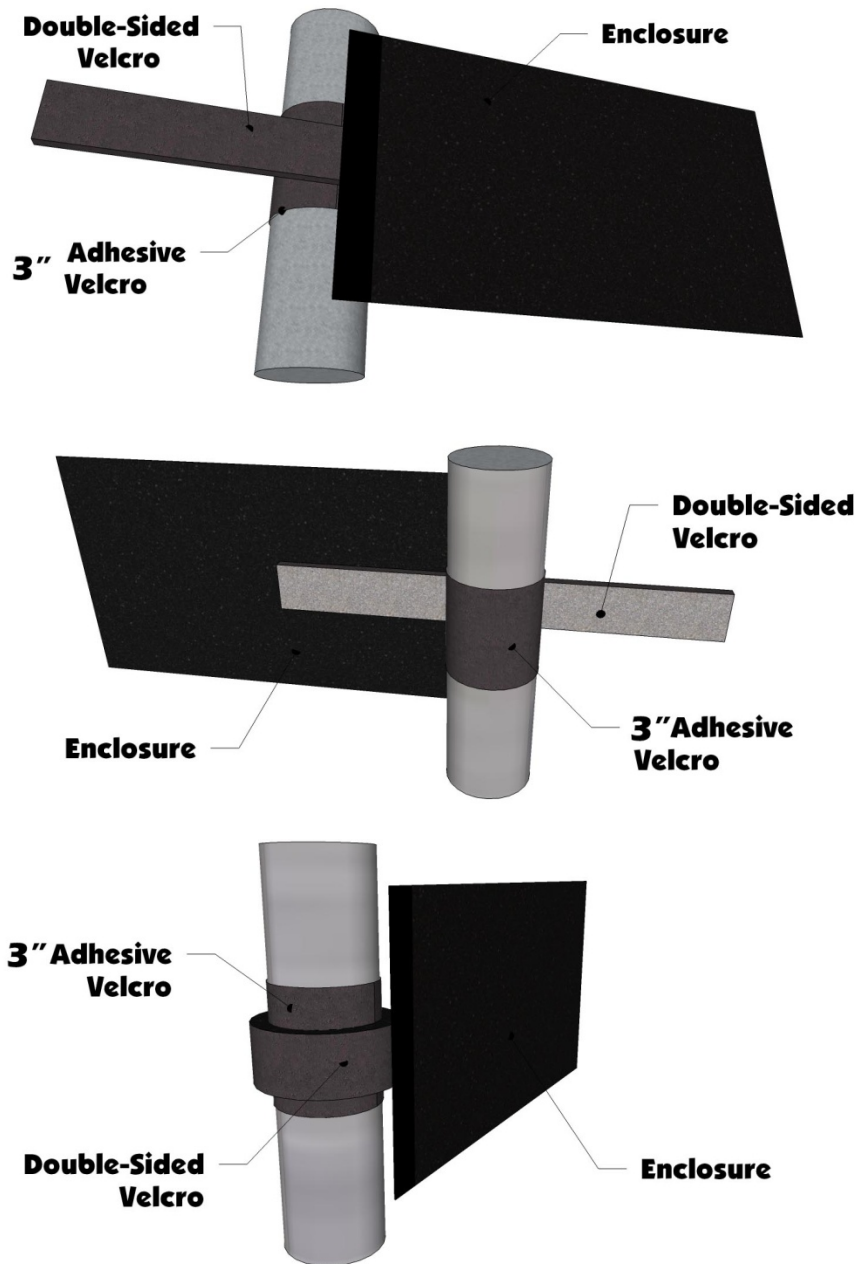

5. After attaching the double-sided strips go to the rear of the door. You will see three Velcro tabs sewn here. Starting just below the top cross bar place the 32" adhesive strips down the bar facing the rear of the vehicle. Then pull the tabs around and attach them down the bar to the Velcro. See photos on next page.

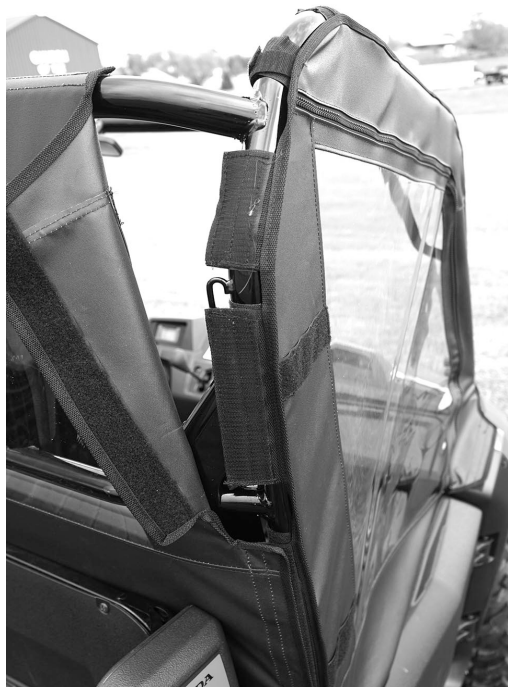

6. Now move to the front lower corner and place the 9" adhesive strip to match up with the Velcro on the cab. See photo on next page.

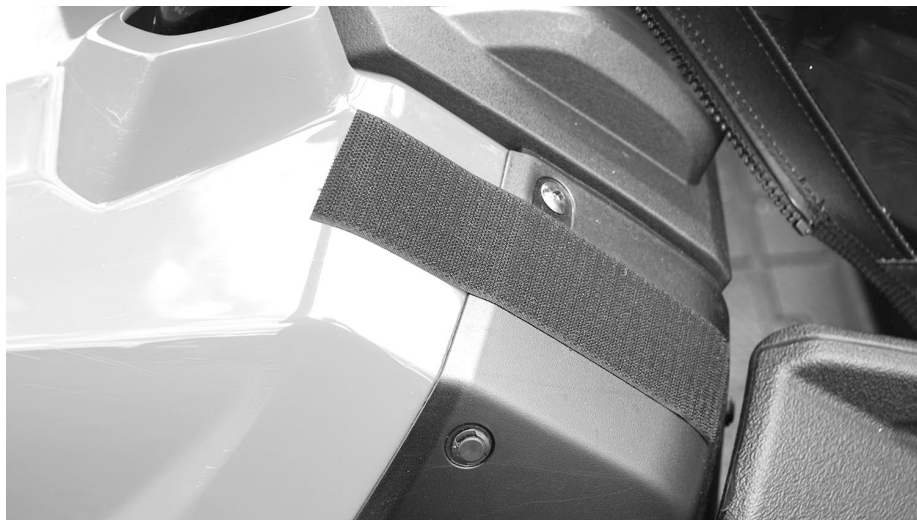

7. Last item on the doors will be a snap on the inside front section of the plastic doors. It's easier to place the snap in the right position by first putting the screw snap stud into the socket on the enclosure. Then pull the door into place and push the snap into the plastic so that a mark is left. Then pull the snap out and screw it into the door making sure not to over tighten and strip out the plastic. See Photos Below.



8. Begin the rear window by placing the 42" adhesive Velcro strip across the top rear bar of the roll cage. This will hold the top of the rear window in place as shown in the photo on the next page.



9. Next attach the sides to the double-sided Velcro tabs sewn along the rear of the doors.
10. Lastly place the 19" Adhesive strip across the bottom to match up with the Velcro sewn to the bottom of the Rear Window.

## **Soft Rear Doors:**

11. Begin by placing the 4" adhesive Velcro strip in the top front corner on the flat surface shown below.



12. Then take the Rear Door and zip it to the Middle Rear Window. This ensures the door is properly placed. Then attach the top front corner to the Velcro. See photo below.



13. Next use the 5" adhesive Velcro strip for the tab on the top rear section of the door. See photo below.



14. Then attach the 3" adhesive strips for the double-sided strips sewn around the edge the same way you did for the front doors.

15. Once all the Velcro is attached securely take the snap studs and screw them into the plastic doors as you did on the front door. **NOTE: It helps to put the snap studs into the sockets in the canvas first. Then one at a time push the screw into the plastic hard enough so that a mark is left behind. Pull the snap stud back out of the door and screw it into the plastic where the mark was made. snap the door in place and move on to the next one.**

## **REAR REAR WINDOW:**

16. Begin by placing the 42" adhesive Velcro strips across the top of the roll cage. Make sure to place it on top of the bar. Photo below shows how it should look.



17. Next attach the double-sided Velcro strips down the side bars. Start at the top and work your way down the tube.
18. Then wrap the straps with the side release buckles around the bars just under the bed and back up to attach them and pull tight.