



FALCON RIDGE

3510-1 Port Jacksonville Pkwy, Jacksonville, FL 32226

800-213-7981

Instructions for Installation and Care of 3010/4010

Folding Lexan Windshield

KAW-4010-WD03

WARNING: Make sure to fit the windshield on your vehicle before removing protective film. We have learned that a bad batch of Mules were sent from the factory with roll cages that are shorter than standard. Because of this be sure that your windshield fits properly before beginning installation. Once protective film is removed it cannot be returned for refund.

1. Check over the parts included in the carton with the parts list shown below:

1-3/4" loom clamps	6 each
1" stainless steel bolts	18 each
Stainless steel washers	36 each
Stainless steel lock nuts	18 each
Rubber gasket	1 each
Strap plates	2 each
8" Velcro straps	2 each
4" adhesive Velcro strips	4 each
Lexan windshield	3 pieces(windshield+braces)

2. Pull the windshield and all of the hardware out of the box. Begin by removing all of the protective film from the windshield pieces and strap plates (be careful to do this in a clean environment so as to not scratch the windshield). Install the Velcro straps to the sides of the lower windshield as illustrated in the photo below. Ensure the strap plates are installed on the outside, with the webbing strap between it and the face of the windshield. All bolt heads should be facing the front, with the locknuts installed on the inside of the windshield. Use one flat washer each under the bolt heads and behind the locknuts.



3. Now take the rubber gasket provided and install it along the bottom of the windshield. Take care to seat the gasket fully to the bottom edge contour. Install the top and bottom braces using 1 stainless bolt, 1 stainless locknut, and 2 stainless washers per hole. On most models, the bottom brace is widest(installed *inside* the windshield), with the narrower brace used at the top(installed *outside* the windshield). Other models use the same brace top and bottom. The bolts should be installed through the front of the windshield with the bolt head facing forward, the locknuts on the back of the windshield facing rearward, with one washer under the bolt head and one washer behind the locknut at the rear. Install both braces using this sequence; even though the bottom brace is installed inside the windshield the bolt heads should still face forward, and hardware orientation remains the same as stated above(see fig.1).
4. Now you are ready to place the windshield on your vehicle. With help, place the windshield up on the hood. The rubber gasket should temporarily hold it up, but be careful. The bent angle at the top of the windshield should go underneath the top bar of the roll cage. Near the top slot in the top windshield, take a 1-3/4"clamp and wrap it around the roll cage tube and then run a bolt with a washer through the slot in the windshield from the outside in(see fig. 2). Then place another washer on the bolt after the slot and run the bolt through the holes in the clamp tabs. Add another washer after that and screw on a locknut and tighten until just snug. You may need a Phillips screwdriver to hold the bolt while tightening the locknut. Repeat this step at all slot locations on the windshield.
5. Before tightening down make sure that the windshield is centered. After the windshield is centered satisfactorily, tighten everything down.
6. Finally wrap the roll bar with the supplied 4" adhesive Velcro strips where the straps on the lower windshield meet up at the both raised and lowered positions(see photo on first page).
7. Enjoy, and remember- when cleaning the windshield do so gently at first with warm water and mild detergent to dislodge any grit that may scratch the Lexan. After rinsing and drying with a soft cloth, you may then polish the windshield with an appropriate commercially available plastic polish, also available from

Falcon Ridge. This will ensure many seasons of clarity and keep scratching and swirling to a minimum. Never use cleaners such as Windex that contain ammonia as doing so may adversely affect the windshield.

8. If needed, additional Velcro sets are available, as well as other spare parts and hardware. Contact Falcon Ridge for information.
9. Transporting or trailering your UTV with the windshield installed is not generally recommended. It is best to remove the windshield before transporting your UTV.

Thank You for your purchase!

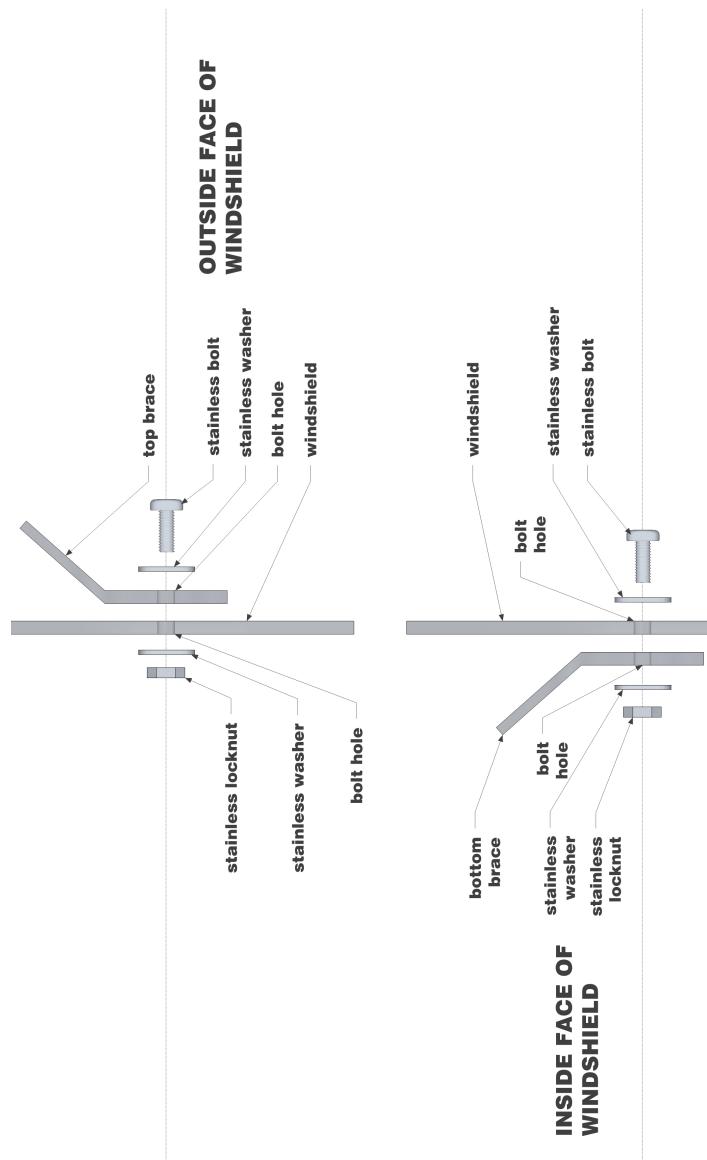


fig.1

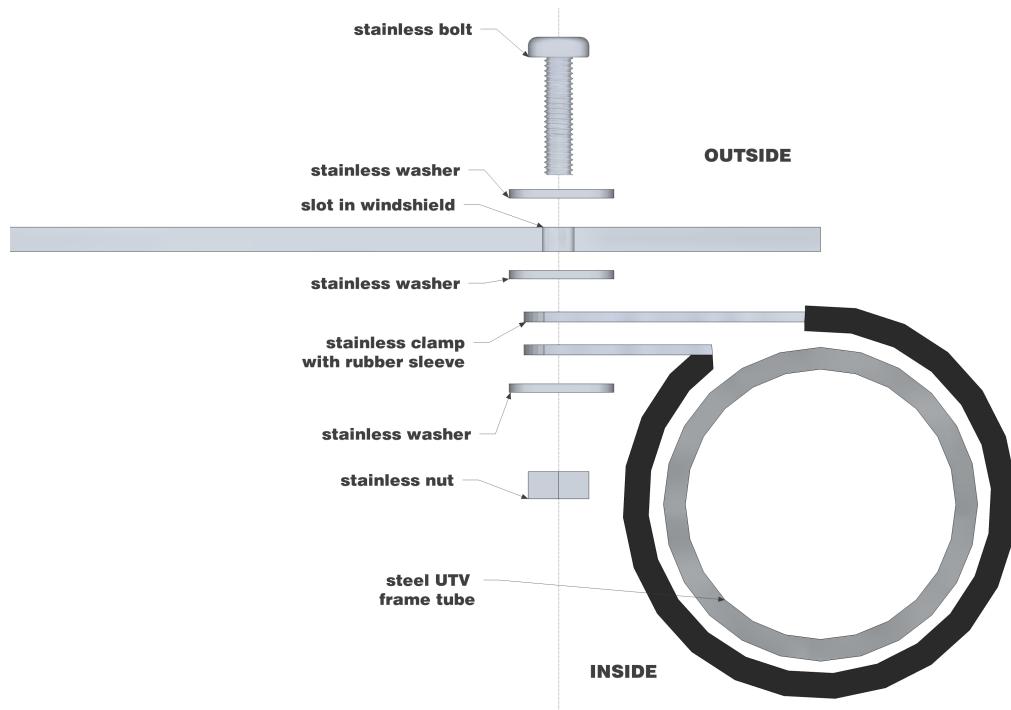


fig.2

Return Policy

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly **as it was originally packaged from the factory to get a full refund for the product!**

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 25% restocking fee will apply.

If ordered from Falcon Ridge please call at 800-213-7981 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Falcon Ridge without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Falcon Ridges many distributors', you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. **NOTE: All windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement of a windshield will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a refund.**) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

Warranty

To The Owner of this Product:

Thank you for purchasing one of Falcon Ridge Cab Enclosures, Tops &/or Windshields! Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.