



## FALCON RIDGE

3510-1 Port Jacksonville Pkwy, Jacksonville, FL 32226  
800-213-7981

**Instructions for Installation and Care of**  
**Kawasaki KRX1000**  
**Aero-Vent Windshield**  
KAW-KRX-WD05

**Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab Material is Flammable.**  
**NOTICE: Please check contents of package for any damage and make sure all parts fit correctly and you are happy with the product before removing protective film. Once the film is removed you cannot return the product for a full refund.**

1. Be sure to read these instructions thoroughly before opening and installing the Kawasaki KRX1000 Aero-Vent Windshield. Roof or other accessories may need to be loosened or removed in order install windshield.
2. Carefully open the carton and remove the windshield. Place windshield on large flat surface that is clean and free of dirt. Inspect the windshield prior to installation. If there are any concerns, please contact customer service. If the protective film has been removed the windshield is not eligible for a return.
3. Check the parts included in the carton with the parts list shown below:

**Included Parts:**

Aero-Vent Windshield	1pc
Aero-Vent Slider	1pc
Strap Clamps	2pcs
¼-20 x 1in SS Bolts	3pcs
¼-20 Lock Nut	4pcs
¼-20 Washer	4pcs
Side Bulb Gasket	42in
Slide Fasteners	11pcs
1-3/8 Nylon Spacers	2pcs
¼-20 x 2in Bolt	1pc
1 1/2in Loom Clamp	1pc


If any parts are damaged or missing, please contact customer service at (800) 213-7981.

**Tools Needed for Installation:**

Adjustable Wrench or 7/16in wrench  
Phillips Screwdriver

# Aero-Vent Windshield Installation

1. Be sure to read all instructions prior to starting the installation.
2. Begin by installing the bulb gasket along the bottom, curved edge of the windshield. Press the gasket firmly into place and work your way along the edge in sections to make installation easier.
3. Assemble the slider handle by using the 2in bolt, nylon spacer, washer and lock nut. The finished assembly should look like the image below.

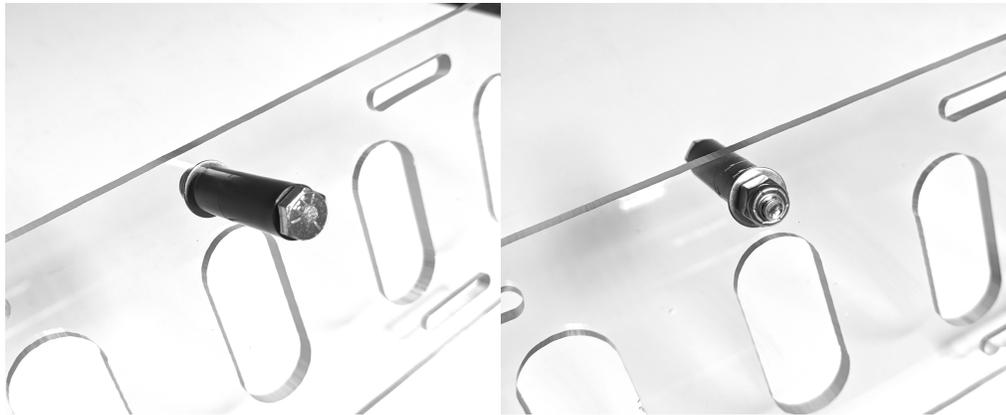

4. Use slide fasteners to attach the slider to the windshield. The slider should be on the inside of the windshield with the handle towards the top of the windshield. Press the slide fasteners through the slots and through the holes in the windshield.
5. Use two  $\frac{1}{4}$ -20 x 1in bolts, two washers and two lock nuts to attach the windshield to the frame in the top corners.



6. Use the loom clamp along with bolt, washer and lock nut to secure the top center of the windshield to the frame.



7. Check all bolts and clamps to ensure they are tightened, and installation is complete.